

High Voltage Interface Chassis

The high voltage interface chassis is located in rack IN01B02 in the injector service building, Zone 1. It is the fourth component from the top of the rack, between the 6B modules and the Glassman spare. The front panel is black with etched figures and labels, and LED indicators. There are no local controls on the interface chassis.

